


Floral Post 450

10 1/2" deep
58" high
3/4" wide

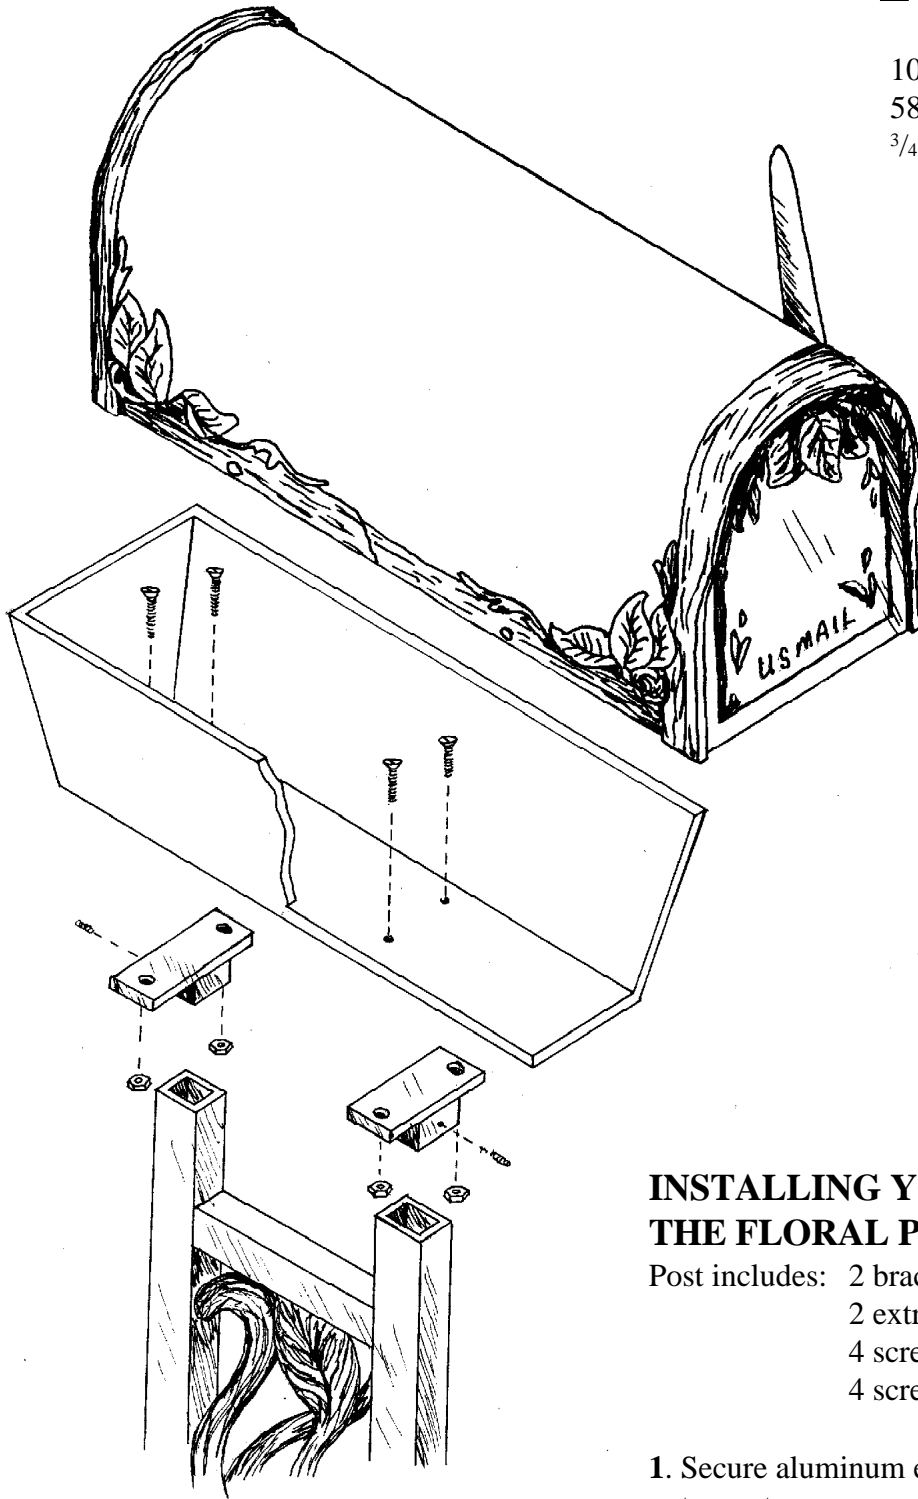

INSTALLING YOUR MAILBOX WITH THE FLORAL POST:

Post includes: 2 brackets,
2 extrusions 15"
4 screws, 1/4 • 20 x 1/2" brass
4 screws, 1/4 • 20 cap nuts

1. Secure aluminum extrusions to bottom of cast post using two set screws.
2. U.S. Postal Service requires approximately 40" from ground to mailbox bottom. Secure post assembly in ground.
3. Set brackets in position on post, set mailbox on brackets. Mark through the screw holes for bracket location. Remove mailbox and brackets from post. Drill 1/4" holes in paper holder and assemble with four screws and cap nuts provided.
4. Place mailbox on post assembly and secure with bracket set screws.