


# Instructions for SPK-680

(3" pole, WRB2 Base and Mounting Bracket)



## Step 1.

Temporarily place the Mounting Bracket onto the top of the post before cementing into the ground.

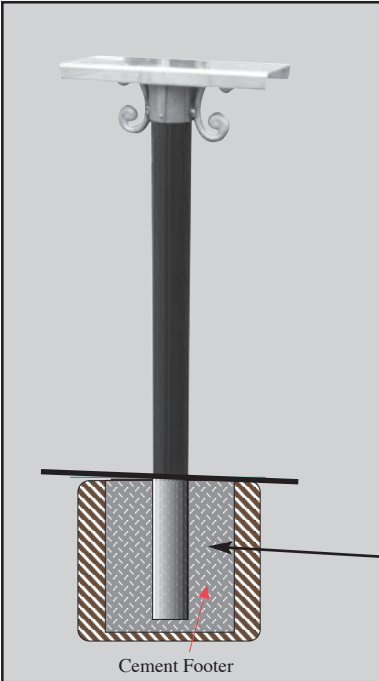

## Step 2.

Place assembled post in hole. Align the Mounting Bracket parallel with the road's edge, and pour cement.

18" deep or below local frost line.

Cement Footer



## Step 3.

After cement has cured, remove mounting plate and slide Wrap Around Base over the post and tighten set screws.



## Step 4.

Re-attach the Mounting Bracket and tighten the set screws. Mount mailboxes to post. Generally mailboxes are installed at a height of 41"-45". From the road surface to inside floor of the mailbox or point of mail entry (locked design) and are set back 6"-8" from front face of curb or road edge to the mailbox door.