

Customers are required to contact the local post office before installing the mailbox to ensure its correct placement and height at the street. Generally, mailboxes are installed at a height of 40-45 in. from the road surface to inside floor of the mailbox or point of mail entry (locked designs) and are set back 6-8 in. from front face of curb or road edge to the mailbox door.


Curbside Mailboxes

ASSEMBLING INSTRUCTIONS:

Mailbox includes:

- 1 Fully Assembled Mailbox
- 4 1 1/4" (no. 8) mounting screws
- 1 7 1/2 x 14 x 3/4 mounting board

1 1/4" screws are supplied for attaching mailbox to mounting board.
 (Make sure board does not interfere with door operation.)

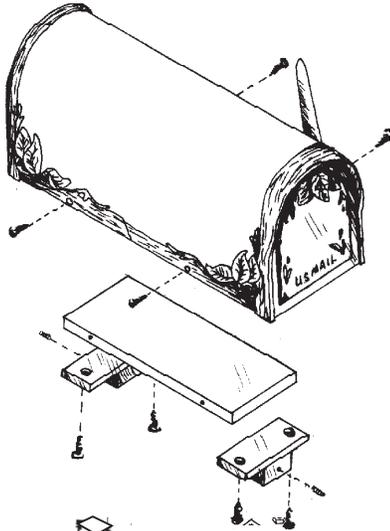

Floral Post 450

This stately support is crafted of durable cast aluminum and is available in nine finishes.

- 10 1/2" deep
- 58" high
- 3/4" wide

INSTALLING YOUR MAILBOX WITH THE FLORAL POST:

Post includes: (2) brackets, (4) 3/4" screws, (2) 10 1/2" extrusions

Not included: 3/4" x 7 1/2" x 16" mounting board

1. Secure (2) 10" round extrusion to bottom of cast post by screwing extrusions to the bottom of the post.
2. U.S. Postal Service requires approximately 40" from ground to mailbox bottom. Secure post assembly in ground.
3. Set brackets in position on post, set mounting board on brackets. With a pencil, make marks through the screw holes for precise bracket location. Remove mounting board and brackets from post and assemble with (4) 3/4" screws provided.
4. Place mounting board assembly onto post and secure with set screws.
5. Place mailbox on post assembly. Position such that mounting board does not interfere with door operation.
6. Secure mailbox to board using screws provided with mailbox.

