


# 48" W x 36" H Double Door Message Board

## Full Assembly Instructions

1. Prepare two post holes to 18" - 24" depth at appropriate distance apart to accommodate assembled unit.
2. Prepare the overall assembly in an open area where installing the product on the ground if possible.
3. Attach the message board "L Brackets" to post using 1-1/4" #3 self drilling screws (2 per L Bracket).

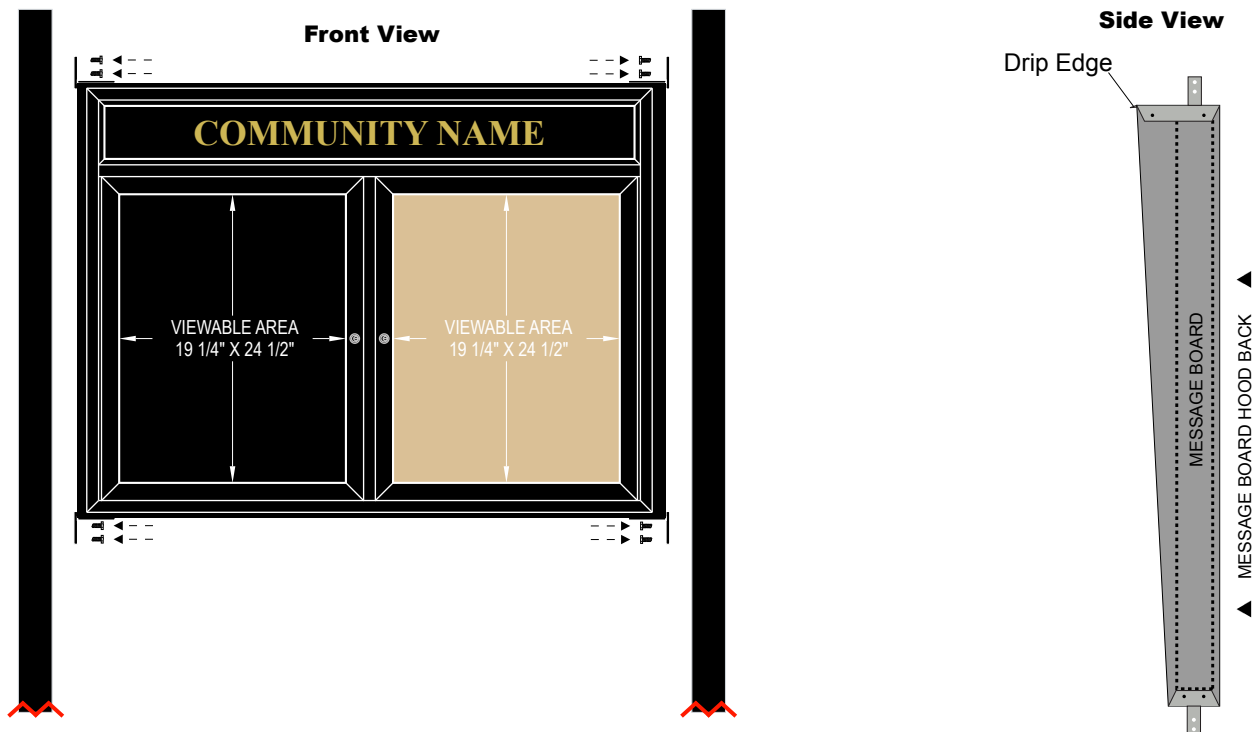

4. Apply Drip - Edge on the top inner edge of message board.
5. Attach the post toppers by tightening set screws around top of post.
6. Align all components, tighten hardware and level the assembly.  
Tools are required for assembly:
  - Adjustable or combination wrench
  - Hex or Alex wrench
  - Small level
  - Hand drill w/ 3/8" nut driver
7. Insert dry post-hole concrete mix per bag instructions around the mailbox posts.
8. Follow remaining instructions per concrete mix, brace and re-check that message board has remained level.