1. Screw hex nut down on each J-bolt until 1.75” of thread is exposed above the hex nut.

2. Place template over J-bolts.

3. Screw hex-nuts on each J-bolt to secure template.
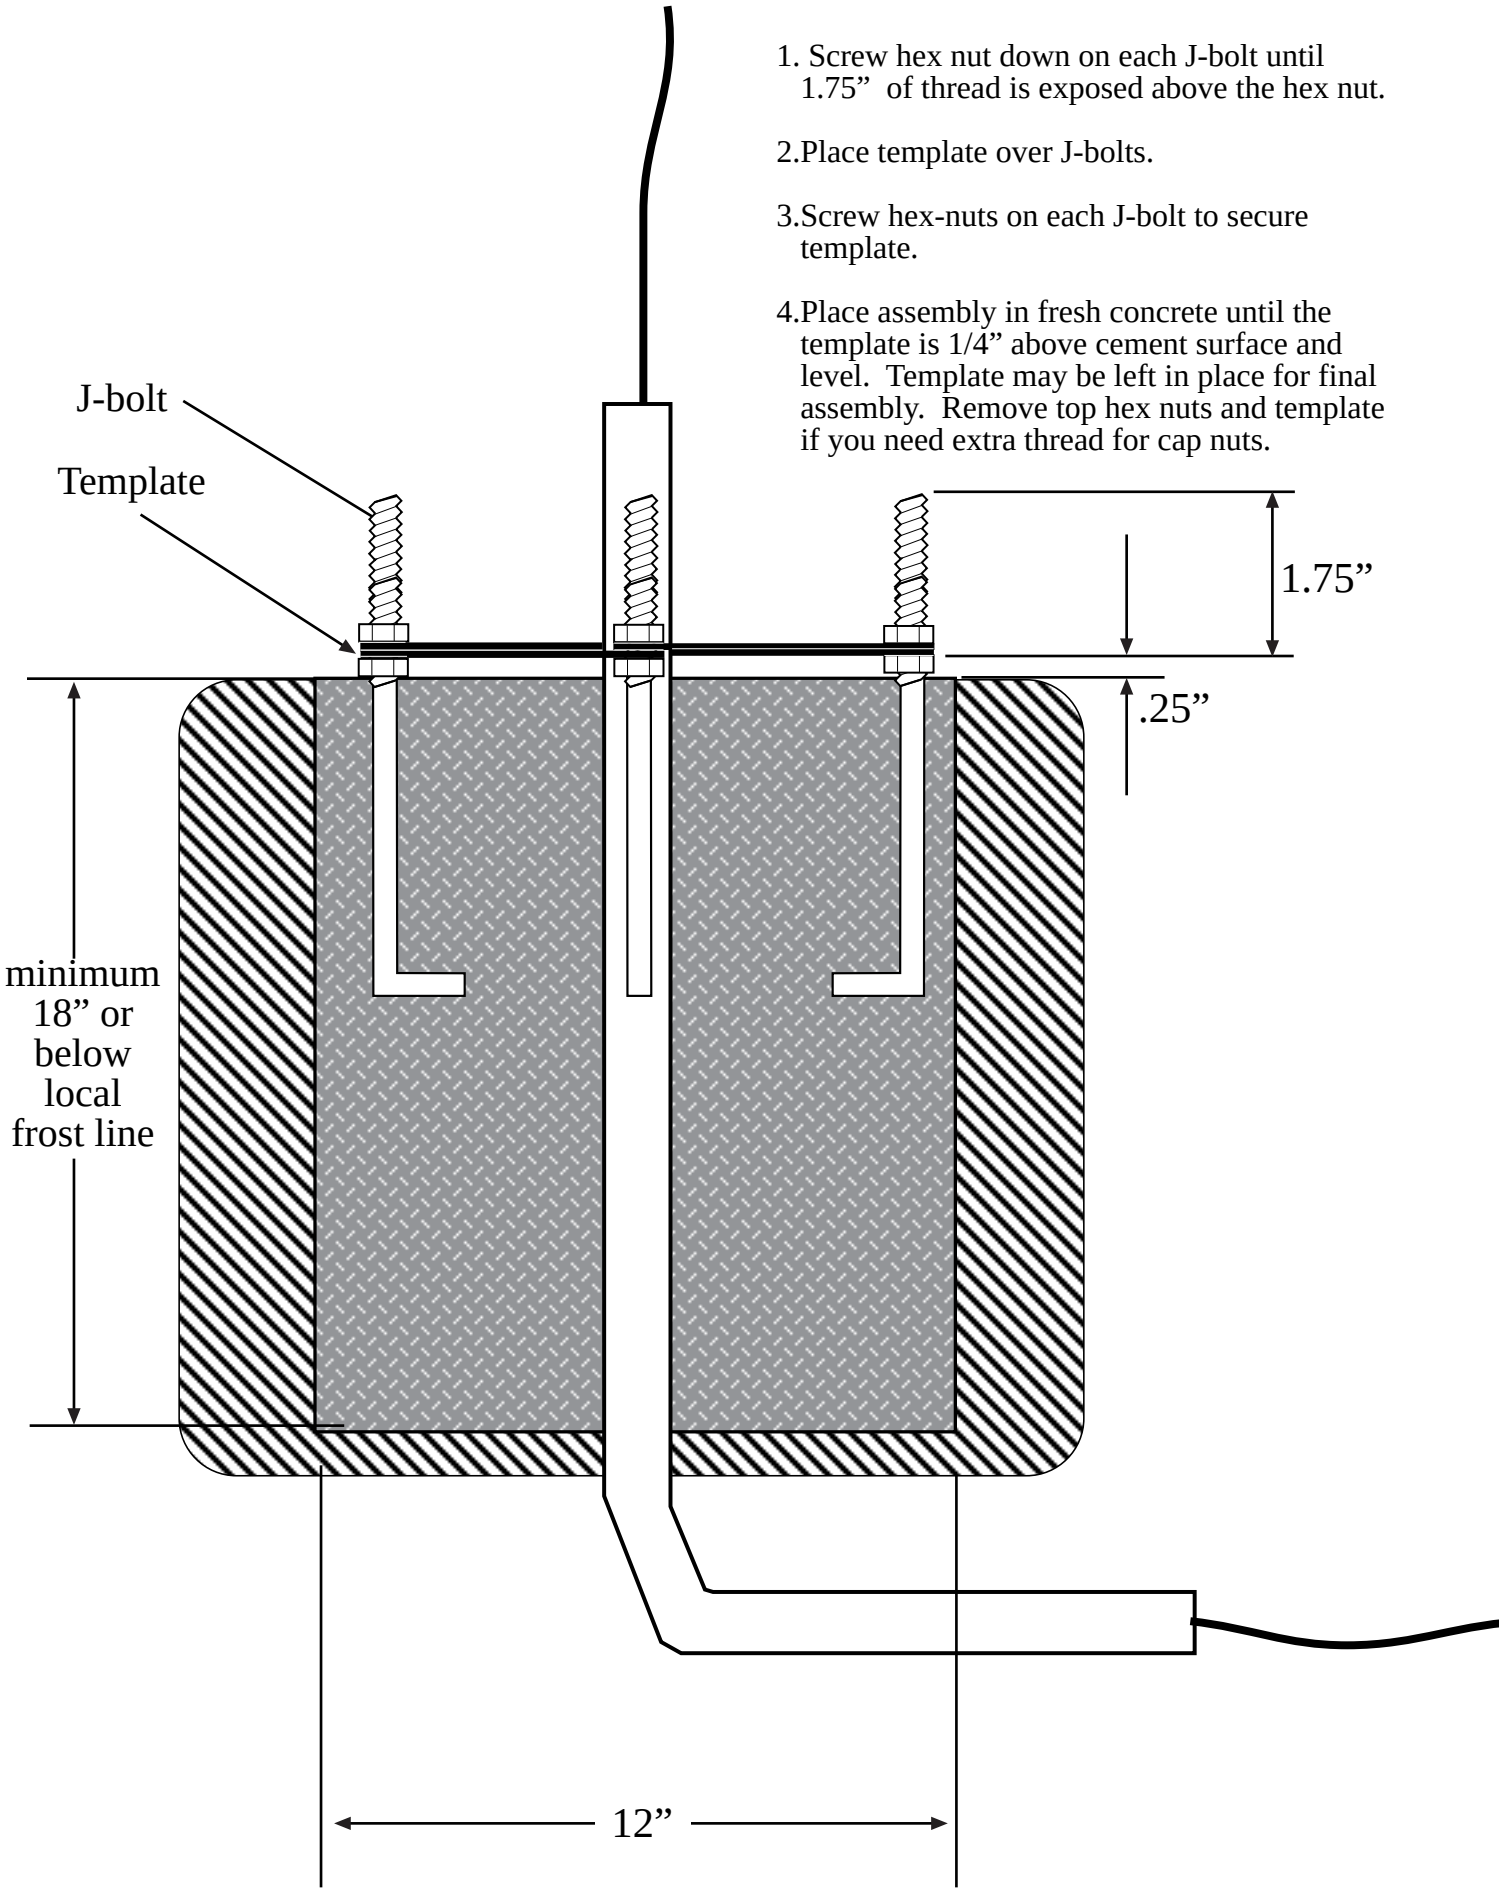
4. Place assembly in fresh concrete until the template is 1/4” above cement surface and level. Template may be left in place for final assembly. Remove top hex nuts and template if you need extra thread for cap nuts.